

== NOTES ==

- A: MODEL NAME, INPUT VOLTAGE RANGE, MAXIMUM INPUT CURRENT, COUNTRY OF MANUFACTURE. ARE SHOWN IN THE NAME PLATE IN ACCORDANCE WITH THE SPECIFICATION.
- B: M4 TAPPED HOLES (ON EACH SIDE NET.8) FOR CUSTOMER CHASSIS MOUNTING. (SCREW PENETRATION DEPTH 6mm MAX.)
- C: TERMINAL COVER SHORT CAN BE ATTACHED HERE.
- D: TERMINAL COVER LONG CAN BE ATTACHED HERE.
- E: BUSBAR INFORMATION  
BUSBAR CONNECTS BETWEEN EZA11K AND EZA11K.  
CHOOSE ACCORDING TO SERIES OPERATION EZA11K UNITS.

SERIES OPERATION EZA11K UNITS	BUSBAR POSITION
2 UNITS (1-BUSBAR)	
3 UNITS (2-BUSBAR)	
4 UNITS (3-BUSBAR)	
5 UNITS (4-BUSBAR)	
6 UNITS (5-BUSBAR)	

- F: DIP SWITCH INFORMATION  
DIP SWITCH IS TURNED ON WHEN THE LEVER IS PRESSED DOWN.  
CHOOSE ACCORDING TO SERIES OPERATION EZA11K UNITS.

== SIGNAL AND SERIES OPERATION CONNECTOR USED ==


PART DESCRIPTION	PART NAME	MANUFACT
CONNECTOR	BM14B-PUDSS-TFC(LF)(SN)	JST

== MATCHING HOUSINGS, PINS & TOOL ==

PART DESCRIPTION	PART NAME	MANUFACT
SOCKET HOUSING	PUDP-14V-S	JST
TERMINAL PINS	SPUD-001T-P0.5(AWG26~22) SPUD-002T-P0.5(AWG28~24)	JST
HAND CRIMPING TOOL	AP-K2N	JST

== ACCESSORIES ==

- \* BUSBAR -----5  
SHORTING +V --- -V  
(ITEMS IN ONE BOX ON SHIPPING. )
- \* TERMINAL COVER SHORT -----2  
(ITEMS IN ONE BOX ON SHIPPING. )
- \* TERMINAL COVER LONG -----1  
(ITEMS IN ONE BOX ON SHIPPING. )
- \* EXTERNAL SIGNAL HARNESS -----None  
(EXTERNAL SIGNAL HARNESS IS INCLUDED WITH EZA11K-320240S, EZA11K-320240SFC.)

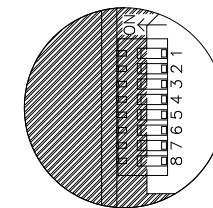

SERIES OPERATION EZA11K UNITS	DIP SWITCH							
	1	2	3	4	5	6	7	8
2 units	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
3 units	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
4 units	ON	ON	ON	ON	OFF	OFF	OFF	OFF
5 units	ON	ON	ON	ON	ON	OFF	OFF	OFF
6 units	ON	ON	ON	ON	ON	ON	OFF	OFF

SCALE	1/5	TITLE	EZA11K-SU OUTLINE
UNITS	mm	DRAWING No.	V012-02-01
ANGLE	3RD ANGLE PROJECTION	<b>TDK-Lambda</b>	